



Instruction Manual

AIR COOLER
Model : AC/7L-AC

 
IMPORTANT : PLEASE READ BEFORE USING THE APPLIANCE. SAFETY PRECAUTION SHOULD BE FOLLOWED TO REDUCE THE RISK OF FIRE ELECTRICAL SHOCK AND PERSONAL INJURY.

1. Unplug the Power Cord during installation, cleaning, refilling of water or relocation of appliance.
2. Do not modify the length of the Power Cord.
3. Do not use the appliance if the Power Cord or Plug is damaged, or the power socket is loose.
4. Repairing/servicing of the appliance must be carried out by authorized and qualified electricians only.
5. If the Power Cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person to avoid a hazard.
6. Do not touch the appliance and Plug when your hands are wet.
7. Do not expose the appliance to dripping or splashing water or objects filled with water, such as vase.
8. Do not use the appliance near the gas stove, any fire source, unusually humid or high temperature, oil soot with a lots of metal powder, objects that may be drawn to fan, such as drapes or curtain and outdoor.
9. Do not insert hands or fingers into the appliance, or movable parts.
10. Place the appliance on a stable and level surface.
11. Do not hang or mount appliance on wall or ceiling.
12. Do not operate or use when appliance housing is damaged.
13. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
14. Do not operate the appliance when the Rear Frame is removed from appliance or if there is a loose-fitting Rear Frame. Doing so can cause serious injury or dangerous electrical shock.


WARNING

This appliance is designed to use only those parts supplied with this appliance and/or accessories designated specifically for use with this appliance. Using parts and/or accessories not designated for use with this appliance could result in personal injury or property damage.


PARTS & ACCESSORIES

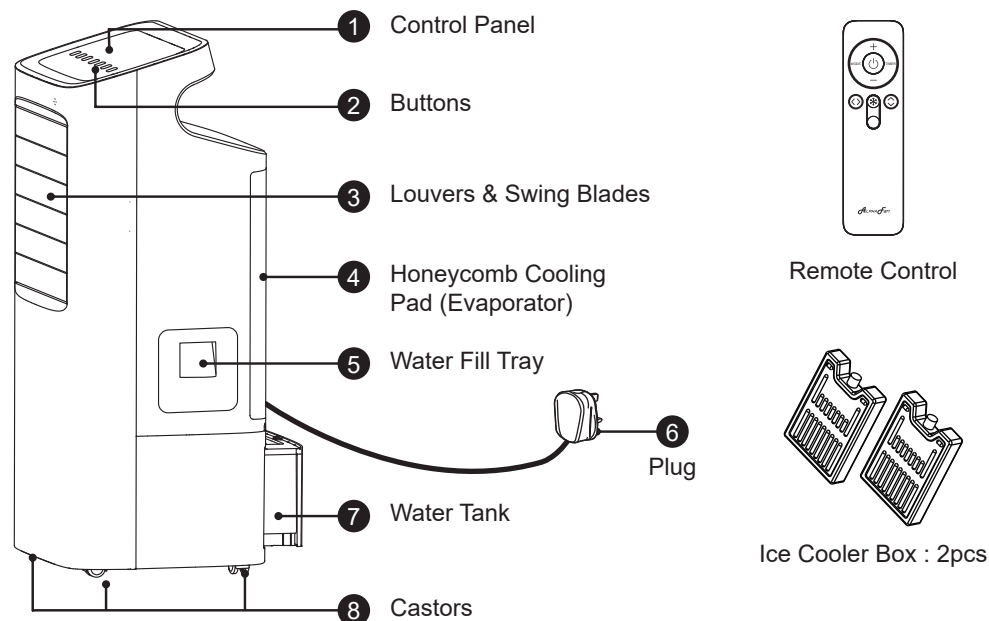

CONTROL PANEL

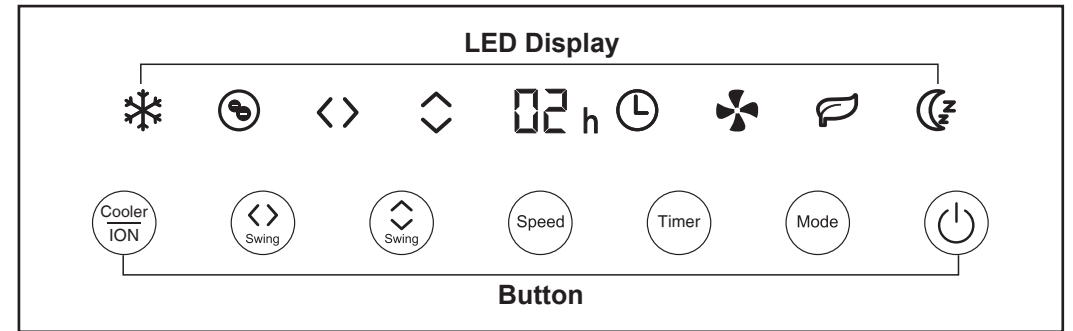 

Button	Function	Display
	<p>Cooler/ION</p> <p>1. Cooler - Evaporative cooling function. IMPORTANT: Water level in the water tank MUST be above the MIN. level mark. At the event when the water level is below MIN., ❄️ icon will blink and cooling will not function.</p> <p>2. ION - releases negative ions into the air. To activate, fan speed function must be ON.</p> <p><i>Function selection</i></p> <p>1st press - Evaporative cooling ON</p> <p>2nd press - Ionizer ON, Evaporative cooling OFF</p> <p>3rd press - Evaporative cooling ON, Ionizer ON</p> <p>4th press - Evaporative cooling OFF, Ionizer OFF</p>	<p>❄️</p> <p>⚡</p> <p>❄️</p> <p>⚡</p> <p>❄️ ⚡</p>
	SWING - Louvers automatically swings in horizontal direction.	<>
	SWING - Louvers automatically swings in vertical direction.	⬆️
	SPEED - Fan speed control - 4 selections.	02
	<p>TIMER - To turn ON or OFF the Air Cooler at a preset time. 1hr → 2hr → 3hr → 4hr → 5hr... → ...15hr → cancel</p> <p>OFF Timer - Turn on the power and select a fan speed. Press TIMER button to select the desire setting. To check on the remaining time, press TIMER button.</p> <p>ON Timer - On standby mode, press TIMER button to select the desire setting.</p>	<p>13 h ⌚</p> <p>13 h ⌚</p>
	<p>MODE - Function modes</p> <p>Normal : 4 fan speed selections.</p> <p>Natural : Fan speed changes within its range creating gentle sea-breeze effect.</p> <p>Sleep : Gradually reduces fan speed every 1hr till speed 1.</p>	<p>🌀</p> <p>🌿</p> <p>🌙</p>
	Power - ON or OFF Air Cooler	⏻ ⏻

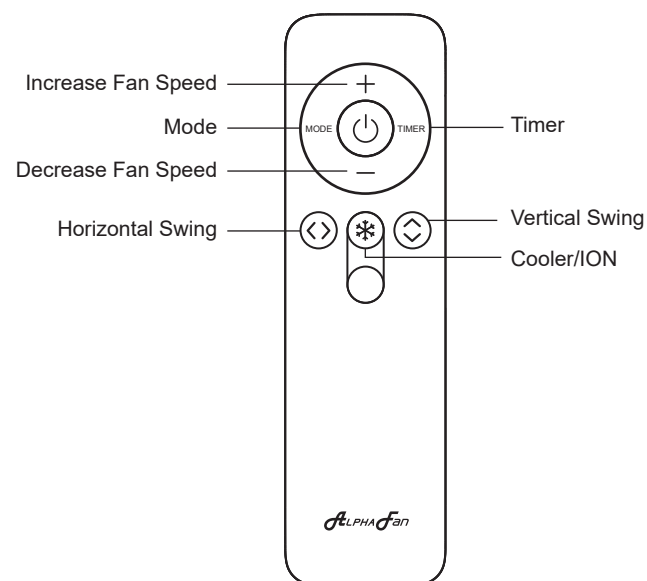 


FILLING WATER INTO WATER TANK

1. Pull out the Water Tank.
2. Fill in clean water. You may fill water from Water Fill Tray at the side of the unit or Water Tank at the back. (Do not exceed the 'MAX' level mark)
3. To increase the cooling efficiency, place the frozen Ice Cooler Box (provided) into Water Tank.

TO FREEZE ICE COOLER BOX

 1. Store the Ice Cooler Box into refrigerator freezer compartment.
2. When the Ice Cooler Box is frozen, place it into the Water Tank according to Fig. 1.

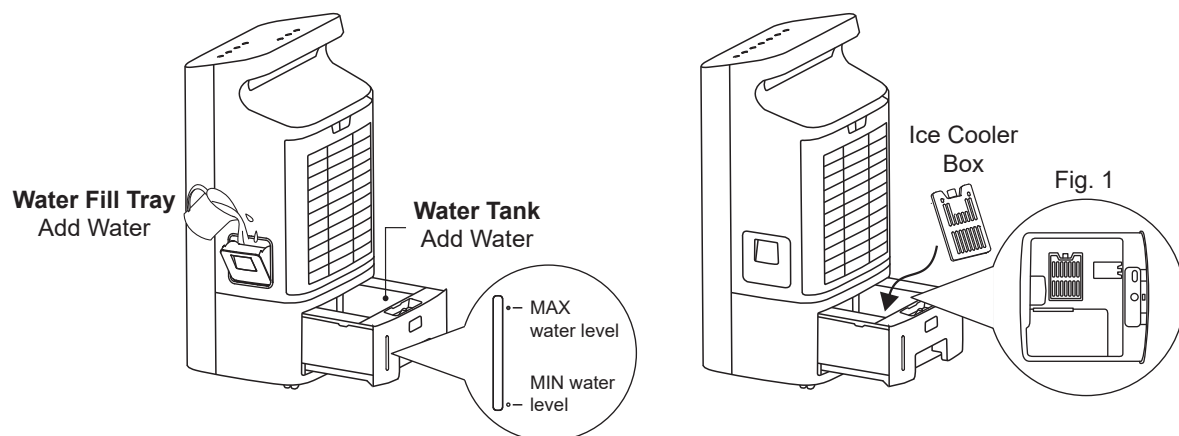


WARNING: DO NOT OPERATE THE APPLIANCE WHEN THE REAR FRAME IS REMOVED FROM THE APPLIANCE OR IF THERE IS A LOOSE-FITTING REAR FRAME. DOING SO CAN CAUSE SERIOUS INJURY OR DANGEROUS ELECTRICAL SHOCK.

IMPORTANT : BEFORE PERFORMING ANY CLEANING & MAINTENANCE WORK, UNPLUG APPLIANCE FROM THE SUPPLY SOCKET.

CLEANING THE HONEYCOMB COOLING PAD AND AIR FILTER


1. Pull the handle of Rear Frame and remove from unit.
2. Gently pull the 2 clasps on the Rear Frame to remove the Honeycomb Cooling Pad.
3. Wash the Honeycomb Cooling Pad and Air Filter under clean water as needed or dust off dirt with a soft brush or cloth.

 Note: It is recommended to clean the Honeycomb Cooling Pad and Air Filter every two weeks. In areas where the surrounding air is dusty, cleaning should be carried out weekly.

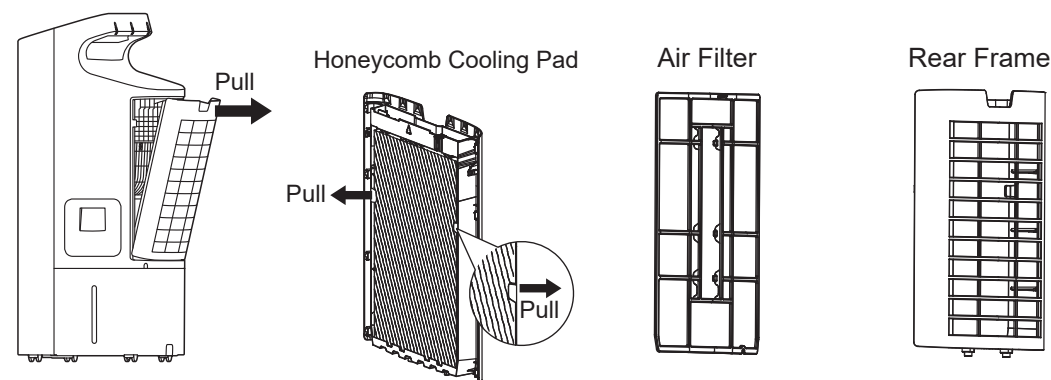

CLEANING THE WATER TANK

 1. Press the Lock button and pull Water Tank out.
2. Remove the Filter and wash under clean water or clean with soft brush.
3. Clean the Water Tank with neutral detergents and rinse with clean water.

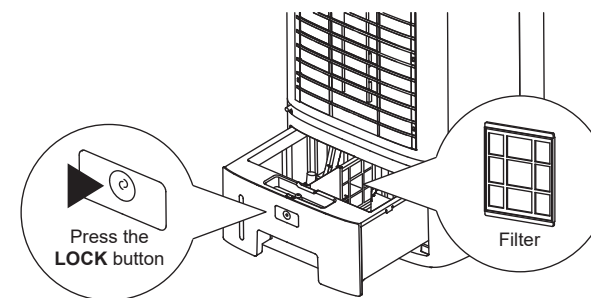

Low Water Alert

Water level in the water tank must be above the MIN. level mark. At the event when the water level is below MIN., the water pump will stop and ❄️ icon will blink and cooling will not function. Refill the water tank and reactivate the Cooler function.

Auto OFF

If the appliance is operating in a consecutive of 15 hours, it will be automatically turn OFF.

Last Memory

This function stores your last setting in memory and the next time you turn on the appliance, it will operate as the last setting.

Note: This function will be disabled if the appliance is disconnect from power supply.

Rear Frame Protection

If the Rear Frame is removed during operation, the appliance will be automatically turn OFF. To restart, reinstall the Rear Frame and press the Power button.

Ice Box

WARNING: DO NOT OPEN THE COVER OF ICE COOLER BOX. THE CONTENT IN ICE COOLER BOX IS NOT EDIBLE.

Place the Ice Cooler Box in freezer for at least 4 hours before putting into the Water Tank.

MAINTENANCE

1. Use only lukewarm water and mild detergent to clean the appliance. Do not use corrosive or acidic solution.
2. Use soft or lint-free cloth to clean the appliance. Rough fabric will scratch the surface.
3. To clean between the louvers, use pipe cleaner, flexible dust wand, vacuum cleaner or compressed air to gently remove dust.
4. DO NOT wet or immerse the appliance, motor, switch, power cord and plug in water.

This electric product is in accordance with the relevant safety requirements.

Repairs should only be carried out by qualified persons using original spare parts, otherwise this may result in considerable danger to the user.

Please contact the Customer Service Centre (below contact list) after sale services if any.

Model	AC/7L-AC
Voltage	220V-240V~ 50Hz
Wattage	68W
Evaporation Capacity	1100 ml/h
Water Tank Capacity	7 litres
Noise Level	≤64dB
Nett Weight	10.6kg

CUSTOMER SERVICE CENTRE

If you need any technical assistance or faulty report, please contact our customer service centre at :

Malaysia

Alpha Home Appliances Sdn. Bhd. (390258-H)

Head Office : 6, Jalan Sungai Kayu 32/37, Berjaya Park, Sect 32,40460 Shah Alam, Selangor.

Tel : 03-5740 6666

Fax : 03-5740 8220

Website : www.alphamalaysia.com

Email : info@alphamalaysia.com

Johor

: 71, Jalan Molek 3/10, Taman Molek, 81100 Johor Bahru.

Tel : 07-353 4833 / 4933

Fax : 07-355 4233

Melaka

: 19, 19-1 & 19-2, Jalan KSB 11, Taman Kota Syahbandar, 75200 Melaka.

Tel : 06-292 2398 / 2399

Fax : 06-292 2392

Perak

: 11, Laluan Tasek Timur 5, Pusat Perdagangan Tasek Indra, 31400 Ipoh, Perak.

Tel : 05-545 2282 / 547 2282

Fax : 05-547 6282

Penang

: 28 Jalan Icon City, Icon City, 14000 Bukit Mertajam, Pulau Pinang.

Tel : 04-506 2366 / 2066 / 2566

Fax : 04-506 2966

Pahang

: A131, Jalan Dato Wong Ah Jang, Taman Liza, 25100 Kuantan, Pahang.

Tel : 09-516 5226

Fax : 09-513 9226

Singapore

Alpha Sales & Services Pte. Ltd. (200709461 R)

50, Ubi Avenue 3, #02-16/17, Frontier, Singapore 408866.

Tel : +65 6841 0111

Fax : +65 6747 0030

Website : www.alphasingapore.com

Email : customercare@alphasingapore.com