Instruction Manual

DESKTOP FAN Model : Motto DT 360-G2/7-AC

Version: 2022 V1


IMPORTANT : PLEASE READ BEFORE USING THE APPLIANCES

- 1. Unplug the power cord during installation, cleaning or relocation of fan.
- 2. Do not modify the length of the power cord.
- 3. Do not use the fan if the power cord or the plug is damaged, or the power socket is loose.
- 4. Repairing/servicing of the fan must be carried out by authorized and qualified electricians only.
- 5. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person to avoid a hazard.
- 6. Do not touch the fan and plug when your hands are wet.
- 7. Do not expose the fan to dripping or splashing water or objects filled with water, such as vase.
- 8. Do not use the fan near the gas stove, any fire source, unusually humid or high temperature, oil soot with a lots of metal powder, objects that may be drawn to fan, such as drapes or curtain and outdoor.
- 9. Do not insert hands or fingers into the front grille, or the movable parts.
- 10. Place the fan on a stable and level surface
- 11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- 12. Ensure that the fan is switched off from the supply mains before removing the guard.


WARNING

This appliance is designed to use only those parts supplied with this appliance and/or accessories designatedspecifically for use with this appliance. Using parts and/or accessories not designated for use with this appliance could result in personal injury or property damage.


PARTS & ACCESSORIES

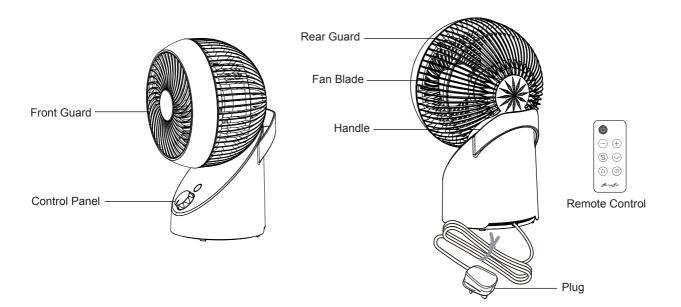


CONTROL PANEL

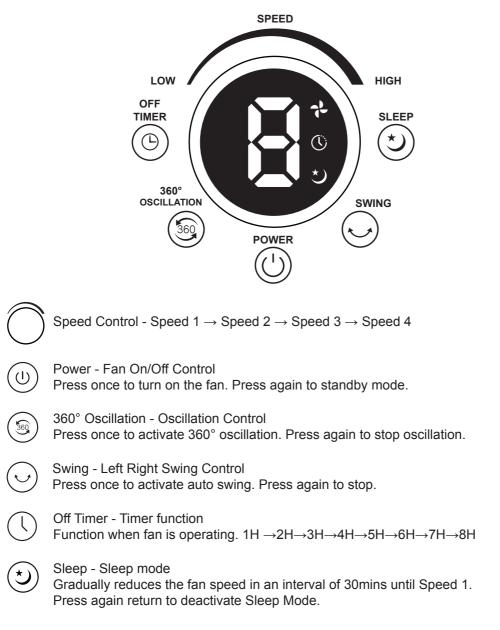

DISPLAY PANEL

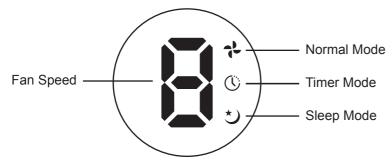


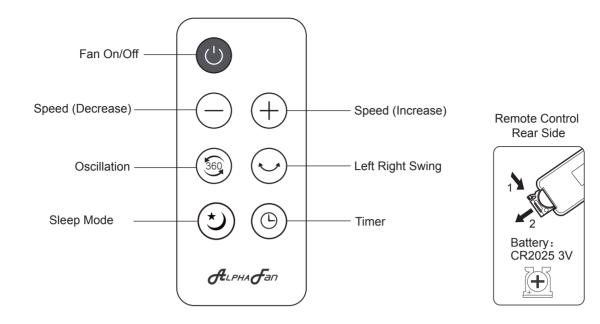

OPERATION

360° Oscillation

- Press 🚳 button to activate 360° Oscillation.

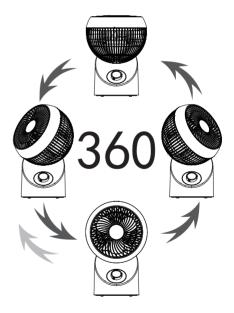




- Press 🕟 button to activate left right auto swing.

IMPORTANT : BEFORE PERFORMING ANY MAINTENANCE WORK, UNPLUG THE FAN FROM THE SUPPLY SOCKET.

Cleaning

- 1. Use only lukewarm water and mild detergent to clean the fan. Do not use corrosive or acidic solution.
- 2. Use soft or lint-free cloth to clean the fan. Rough fabric will scratch the surface.
- 3. To clean between the guards, use pipe cleaner, flexible dust wand, vacuum cleaner or compressed air to gently remove dust.
- 4. DO NOT wet or immerse the motor, switch, power cord and plug in water.

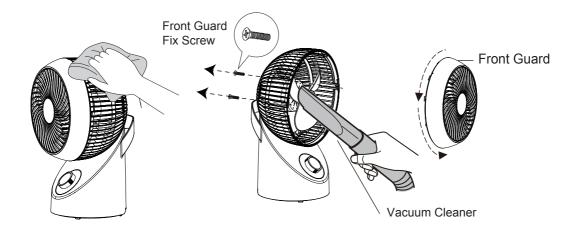

TECHNICAL SPECIFICATIONS

Model	Voltage	Wattage	
Motto DT 360-G2/7-AC	220V-240V ~ 50/60Hz	36W	

If you need any technical assistance or faulty report, please contact our customer service centre at :

Head Office	e : :	03-5740 6666	, Berjaya Park, Sect 32,40460 Shah Alam, Selangor.
Johor		71, Jalan Molek 3/10, Tama	n Molek, 81100 Johor Bahru.
Tel		07-353 4833 / 4933	Fax : 07-355 4233
Melaka		19, 19-1 & 19-2, Jalan KSB	11, Taman Kota Syahbandar, 75200 Melaka.
Tel		06-292 2398 / 2399	Fax : 06-292 2392
Perak		16, Jalan Tasek Timur, Tam	an Tasek Indra, 31400 Ipoh, Perak.
Tel		05-545 2282 / 547 2282	Fax : 05-547 6282
Penang		28 Jalan Icon City, Icon City	/, 14000 Bukit Mertajam, Pulau Pinang.
Tel		04-506 2366 / 2066 / 2566	Fax : 04-506 2966
Pahang		A131, Jalan Dato Wong Ah	Jang, Taman Liza, 25100 Kuantan, Pahang.
Tel		09-516 5226	Fax : 09-513 9226
Singapore Alpha Sales & Services Pte. Ltd. (200709461 R) 50, Ubi Avenue 3, #02-16/17, Frontier, Singapore 408866. Tel : +65 6841 0111 Fax : +65 6747 0030			

Tel: +65 6841 0111Fax : +65 6747 0030Website: www.alphasingapore.comEmail : customercare@alphasingapore.com