AlphaFan

Instruction Manual

ELECTRIC FAN

Model: TB-AD04/B

Alt. Name: MOTTO DT C12/7

Version: 2024 V1

SAFETY PRECAUTION

IMPORTANT : PLEASE READ BEFORE USING THE APPLIANCES

1. Unplug the power cord during installation, cleaning or relocation of fan.
2. Do not modify the length of the power cord.
3. Do not use the fan if the power cord or the plug is damaged, or the power socket is loose.
4. Repairing/servicing of the fan must be carried out by authorized and qualified electricians only.
5. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or Similarly qualified person to avoid a hazard.
6. Do not touch the fan and plug when your hands are wet.
7. Do not expose the fan to dripping or splashing water or objects filled with water, such as vase.
8. Do not use the fan near the gas stove, any fire source, unusually humid or high temperature, Oil soot with a lots of metal powder, objects that may be drawn to fan, such as drapes or curtain And outdoor.
9. Do not insert hands or fingers into the front grille, or the movable parts.
10. Place the fan on a stable and level surface
11. This appliance is not intended for use by persons (including children) with reduced physical, Sensory or mental capabilities, or lack of experience and knowledge, unless they have been Given supervision or instruction concerning use of the appliance by a person responsible for Their safety. Children should be supervised to ensure that they do not play with the appliance.

WARNING

This appliance is designed to use only those parts supplied with this appliance and/or accessories Designated specifically for use with this appliance. Using parts and/or accessories not designated For use with this appliance could result in personal injury or property damage.

PARTS & ACCESSORIES

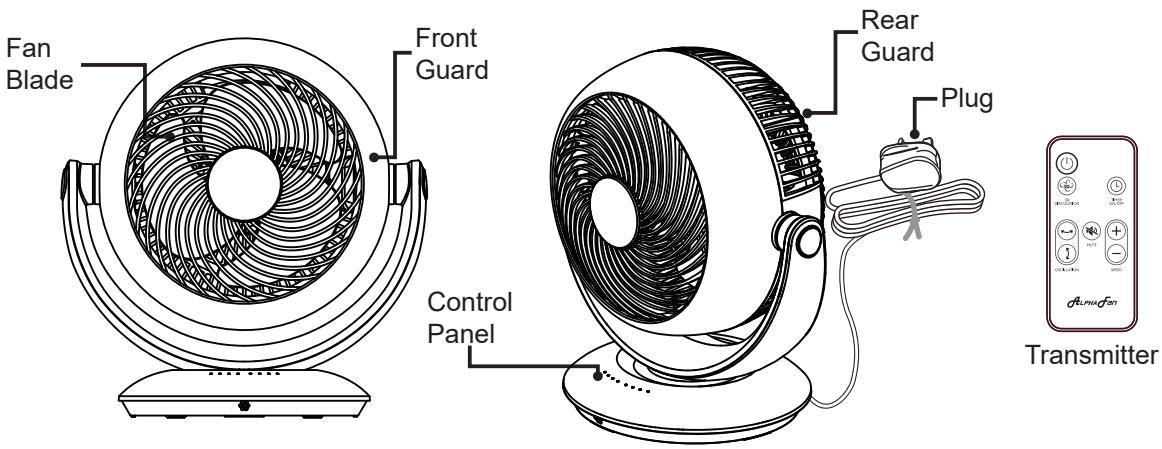

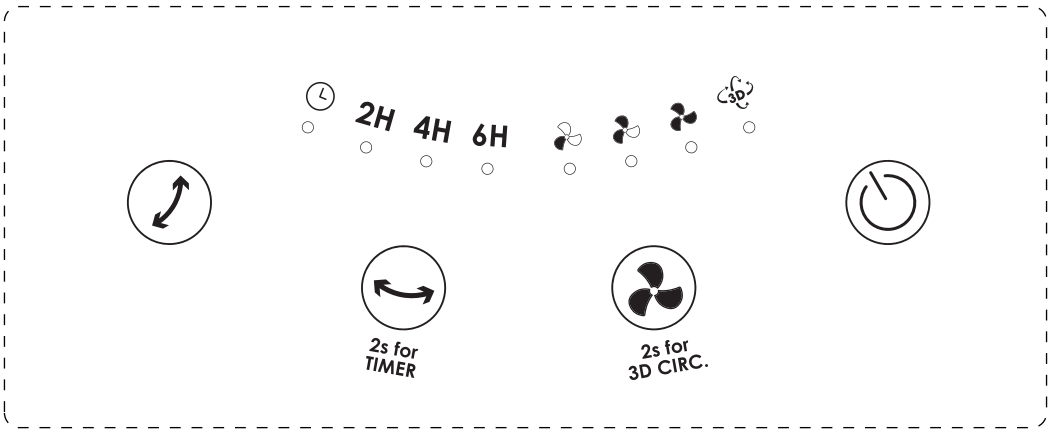

Power
Plug in power to enter standby state. Touch this button to turn on the fan. Upon first use, the fan will enter Circulation Mode by default. If powered on again after being in Standby Mode, the fan will default to the last use speed setting.

Vertical Oscillation
In the operation state, single touch to activate vertical oscillation function. Touch again to deactivate vertical oscillation.
Automatically tilt vertical at 90-degree range.

Horizontal Oscillation
In the operation state, single touch to activate horizontal oscillation function. Touch again to deactivate horizontal oscillation.
Swing automatically from left to right or right to left within a 90-degree range.

Timer On/Off (2s for Timer)
Timer On - In the operation state, touch and hold for 2s to activate.
Timer Off - In the standby state, touch and hold for 2s to activate.

* *During this state, each touch of this button cycles the timer duration through 2h, 4h, 6h, 8h, 10h, 12h. Corresponding light will light when timer is set.*

Fan Speed (1-3 Levels)
In the operation state, touch to change the fan speed from 1 - 3.

3D Circulation (2s for 3D Circ.)
In the operation state, touch and hold for 2s to enter Circulation Mode.
In Circulation Mode, fan speed operate in highest speed while horizontal and vertical oscillation activated. Touch this button again to exit Circulation Mode.

Warning:
To ensure longevity of the oscillation motor,
DO NOT manually adjust the fan angle up and down.

TRANSMITTER FUNCTION

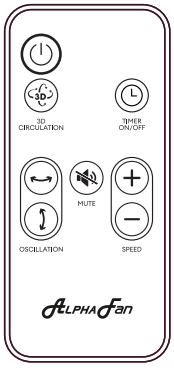

Power (On/Standby)

3D Circulation

Timer On/Off

Horizontal Oscillation

Vertical Oscillation

Fan Speed Increase

Fan Speed Decrease

Mute Button:
Turn off or turn on the fan's beep sound

MAINTENANCE

IMPORTANT : BEFORE PERFORMING ANY MAINTENANCE WORK, UNPLUG THE FAN FROM THE SUPPLY SOCKET.

Cleaning

1. Use only lukewarm water and mild detergent to clean the fan.
2. Use soft or lint-free cloth to clean the fan. Rough fabric will scratch the surface.
3. To clean between the guards, use pipe cleaner, flexible dust wand, vacuum cleaner or compressed air to gently remove dust.

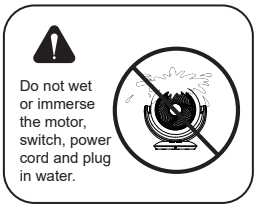

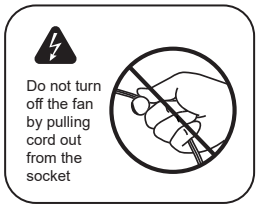

TECHNICAL SPECIFICATIONS

Model	Alt. Model	Voltage	Wattage
TB-AD04/B	MOTTO DT C12/7	220V-240V ~ 50-60Hz	35W

CUSTOMER SERVICE CENTRE

If you need any technical assistance or faulty report, please contact our customer service center at :

Malaysia
Alpha Home Appliances Sdn. Bhd. (390258-H)
Head Office : 6, Jalan Sungai Kayu 32/37, Berjaya Park, Sect 32,40460 Shah Alam, Selangor.
Tel : 03-5740 6666 Fax : 03-5740 8220
Website : www.alphamalaysia.com Email : info@alphamalaysia.com

Johor : 71, Jalan Molek 3/10, Taman Molek, 81100 Johor Bahru.
Tel : 07-353 4833 / 4933 Fax : 07-355 4233

Melaka : 19, 19-1 & 19-2, Jalan KSB 11, Taman Kota Syahbandar, 75200 Melaka.
Tel : 06-292 2398 / 2399 Fax : 06-292 2392

Perak : 11, Laluan Tasek Timur 5, Taman Tasek Indra, 31400 Ipoh, Perak.
Tel : 05-545 2282 / 547 2282 Fax : 05-547 6282

Penang : 28 Jalan Icon City, Icon City, 14000 Bukit Mertajam, Pulau Pinang.
Tel : 04-506 2366 / 2066 / 2566 Fax : 04-506 2966

Pahang : A131, Jalan Dato Wong Ah Jang, Taman Liza, 25100 Kuantan, Pahang.
Tel : 09-516 5226 Fax : 09-513 9226

Singapore
Alpha Sales & Services Pte. Ltd. (200709461 R)
50, Ubi Avenue 3, #02-16/17, Frontier, Singapore 408866.
Tel : +65 6841 0111 Fax : +65 6747 0030
Website : www.alphasingapore.com Email : customercare@alphasingapore.com